2. Disassembly and Reassembly

2-1.FRONT CABINET

1. REMOVE ① OF ITS HANDLE
2. REMOVE 6 SCREWS OF ② OF ITS REAR PART
3. REMOVE FRONT CABINET TO FRONTWARD

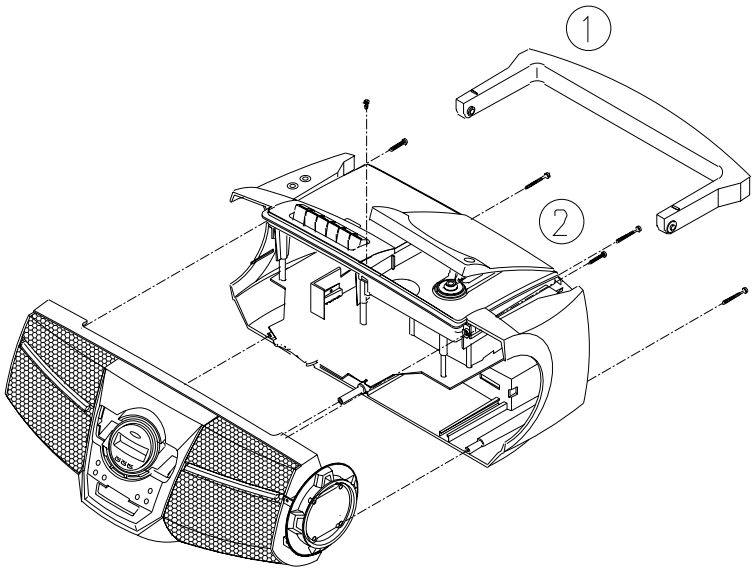

2-2.TOP-CABINET ASS'Y

1. REMOVE 3 SCREWS OF ITS REAR PART
2. REMOVE TOP CABINET ASS'Y TO FRONTWARD

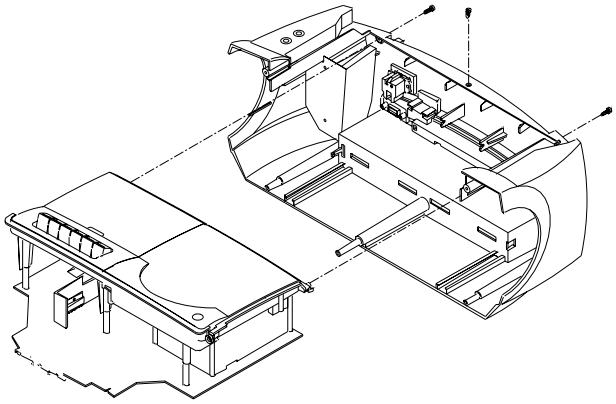

2-3. MAIN-PCB ASS'Y & CD-MECHA ASS'Y AND CASS-MECHA ASS'Y
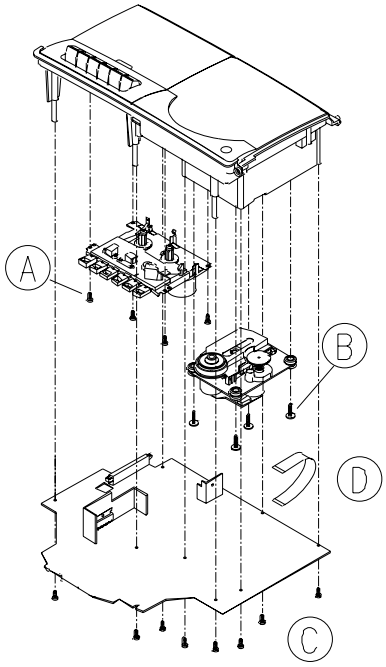
1. REMOVE 8 SCREWS OF Ⓒ ITS TOP-CABINET PART
2. REMOVE THE CONNECT WIRE OF Ⓓ, AND REMOVE MAIN-PCB ASS'Y TO BACKWARD
3. REMOVE 4 SCREWS OF Ⓐ ITS TOP-CABINET PART, AND REMOVE CASS-MECHA ASS'Y TO BACKWARD
4. REMOVE 4 SCREWS OF Ⓑ ITS TOP-CABINET PART, AND REMOVE CD-MECHA ASS'Y TO BACKWARD